



Linkstyle

Linkstyle AFRA INDOOR  
Smart Bluetooth Soil  
Moisture Sensor Manual

Scan the QR code below for an updated digital manual, more details, guides, FAQs, and other product resources for this device



<https://linkstyle.life/afrabh>

 
If you need any support, do not hesitate to reach out to us at:

email: [support@linkstyle.life](mailto:support@linkstyle.life)  
voicemail: 1-888-419-4888

# Index


A. Notice Before Use.....	4
B. Product Overview.....	5
C. Setup & Installation.....	8
D. Technical Specifications.....	13
E. Warranty & Support.....	14

## A. Notice Before Use

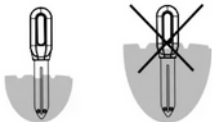

- Indoor use only. This device is NOT waterproof.
- Be sure to clean the outer surface of the device before use.
- Insert the soil sensor into the soil for more than 2/3 of its length for best accuracy.
- Do NOT bury the plastic part of the device in the soil.
- The sensor readings will update 1-2 minutes after inserting it into the soil.
- When setting up this device with a Nexohub gateway, keep this device, the gateway, and the Wi-Fi router all within close proximity during the setup process.

## B. Product Overview

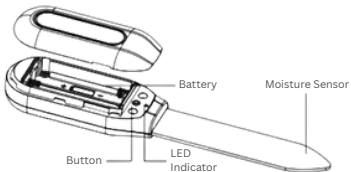 

This device monitors air temperature and soil moisture to help you better care for your indoor plants.

## C. Setup & Installation

### Install the Linkstyle app

Scan the QR code below to download and install the Linkstyle app. Register a new account on the app if you do not have one.



\*Alternatively, you can also search for "Linkstyle" on the Apple App Store or Google Play Store to find the app.

## C. Setup & Installation (Continued)

### \*\*\*Important Note:

When registering an account in the Linkstyle app, be sure to set the region to United States of America.



### Register

United States of America



Email Address

I Agree [Privacy Policy](#) and [User Agreement](#)

## C. Setup & Installation (Continued)

### **Prepare device for setup**

Pull open the battery compartment and install 2 x AAA batteries.

Press and hold the Button for 6 seconds until the LED indicator light flashes green. This puts the device in pairing mode.

### **Add device to Linkstyle app**

If you are adding the device to the Linkstyle app directly via Bluetooth without a Nexohub, follow the steps starting on page 9.

If you are adding the device to the Linkstyle app through a Nexohub gateway, follow the steps starting on page 10.

 


## C. Setup & Installation (Continued)

### Add device to Linkstyle app - Bluetooth

Step 1: In the Devices page of the Linkstyle app, tap the “+” button on the top right corner and tap “Add Device”

Step 2: The app will automatically scan for devices nearby in setup mode. Once the the device is found, tap its icon and follow the on-screen instructions to complete setup.

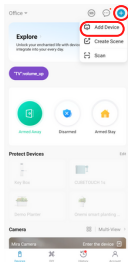


## C. Setup & Installation (Continued)

### Add device to Linkstyle app - Nexohub

Make sure to have a Nexohub added to your Linkstyle app and online before adding this device.


 
Step 1: In the Devices page of the Linkstyle app, find and tap the Nexohub.

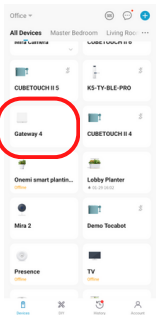

## C. Setup & Installation (Continued)

### Add device to Linkstyle app - Nexohub

  Step 2: Make sure the "Bluetooth devices list" is selected, and tap "Add devices", then "Add new devices"

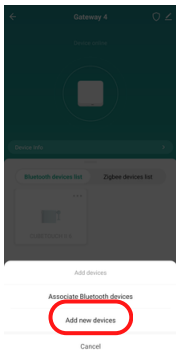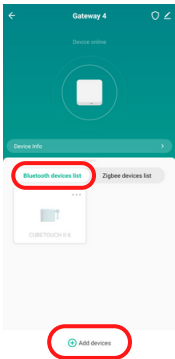

## C. Setup & Installation (Continued)

 
 
### **Add device to Linkstyle app - Nexohub**

Step 3: The app will automatically scan for devices nearby in setup mode. Once the the device is found, tap "Done" and follow the on-screen instructions to complete setup.

### **Insert device into planter pot**

Insert the soil sensor portion of the device at least 2/3 of the way into the soil. Do NOT insert it up to the plastic portion that contains the batteries.

Wait for 1-2 minutes for the sensor reading to update in the Linkstyle app.

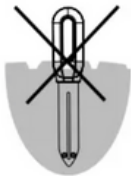

## D. Technical Specifications

<b>Model Number</b>	FK-S07
<b>OS Compatibility</b>	Android 4.4+ iOS 7.0+
<b>Connectivity</b>	Bluetooth 4.1
<b>Power Source</b>	2 x AAA battery
<b>Soil Moisture</b>	0 to 100%
<b>Air Temperature</b>	14°F to 140°F (-10°C to 60°C)

## F. Warranty & Support

Thank you for choosing Linkstyle. We are dedicated to providing innovative and convenient products for an enhanced lifestyle. This Product Warranty Agreement ("Warranty") applies to items purchased directly from Linkstyle.

### **Warranty Duration:**

All products sold by Linkstyle come with a standard one (1) year warranty from the date of purchase, unless stated otherwise.

### **Warranty Coverage:**

During the warranty duration, Linkstyle assures that the product will be free from defects in materials and workmanship when used under regular conditions.

### **Exclusions:**

This Warranty does not cover the following:

- Damages due to misuse, neglect, or deviation from user instructions.
- Damages from natural disasters such as floods, fires, or accidents.
- Unauthorized repairs, modifications, or disassembling.
- Cosmetic damages like scratches, dents, or broken parts.

## F. Warranty & Support (Continued)

### **Filing a Warranty Claim:**

- Reach out to Linkstyle Customer Support providing your proof of purchase, product details, and a comprehensive description of the issue.
- Our team will evaluate the claim and, if required, provide return shipping instructions.
- If the product is confirmed defective, Linkstyle, at its discretion, will repair or replace the item.

### **Limitation of Liability:**

Linkstyle's liability is strictly limited to the repair or replacement of the product. Under no circumstances will Linkstyle be liable for any indirect, incidental, or consequential damages. The total liability shall not exceed the original purchase price of the product.

### **Warranty Transferability:**

This Warranty is solely for the original purchaser and cannot be transferred.

### **Governing Law:**

This Warranty is governed by the laws of the country/state of purchase.

### **Disclaimer:**

Apart from what's stated here, no other express or implied warranties apply, including implied warranties of merchantability or suitability for a specific purpose.

For any queries or concerns regarding our products or this Warranty, reach out to us at [support@linkstyle.life](mailto:support@linkstyle.life).

Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries.

App Store is a service mark of Apple, Inc.

Amazon, Alexa, and all related logos are trademarks of Amazon.com Inc. or its affiliates.

Google and Google Play are trademarks of Google LLC.

Other third-party brands and names are the property of their respective owners.



# Linkstyle.life

Unlocking the enchanted life!