



Linkstyle

Linkstyle Quistro Smart  
Battery-Powered Wi-Fi  
Outdoor Camera Manual

This product manual was last updated on 07-09-2024. At the time of purchase, there may be an updated version available.

For the latest  
version of the  
manual:



For the setup  
video



<https://linkstyle.life/bcam>

If you need any support, don't hesitate to reach out to us at:

email: [support@linkstyle.life](mailto:support@linkstyle.life)  
voicemail: 1-888-419-4888

 
# Index

A. Notice Before Use.....	4
B. Product Overview.....	5
C. Setup & Installation.....	6
D. Operating Instructions.....	13
E. Troubleshooting.....	16
F. Frequently Asked Questions.....	17
G. Technical Specifications.....	19
H. Warranty & Support.....	20

## A. Notice Before Use

- Before adding the camera to your Wi-Fi network, ensure it has a strong Wi-Fi signal. You can test this using your smartphone.
- Connect the device to your smartphone and ensure you can monitor it successfully through the app before mounting it on the wall.
- This camera supports only 2.4GHz Wi-Fi routers. Ensure you are connected to a 2.4GHz Wi-Fi router, the same one your smartphone uses.
- The camera does not support hidden Wi-Fi networks. Please set your Wi-Fi network to visible mode.
- Install the camera in an area with stable Wi-Fi coverage.

## B. Product Overview

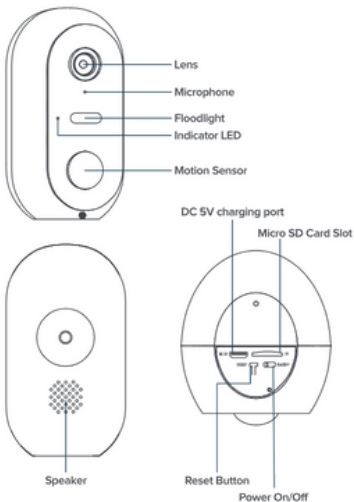

1\* Battery  
Camera



1\* Wall  
Mount



Screw  
Sets



1\* USB  
Cable



User  
Manual

1\* User  
Manual

## C. Setup & Installation

Scan the QR code below to download and install the Linkstyle app. Register a new account on the app if you do not have one.



\*Alternatively, you can also search for “Linkstyle” on the Apple App Store or Google Play Store to find the app.

## C. Setup & Installation (Continued)

### \*\*\*Important Note:

When registering an account in the Linkstyle app, be sure to set the region to United States of America.



### Register

United States of America

Email Address

 
I Agree [Privacy Policy](#) and [User Agreement](#)

Get Verification Code

## C. Setup & Installation (Continued)

### Step 1: Powering On the Camera

Slide the switch to the 'ON' position. You'll hear a beep, and a red light will start flashing. If the camera doesn't power on, plug it into a DC5V 1A/2A phone adapter and charge for 15 minutes before trying again.

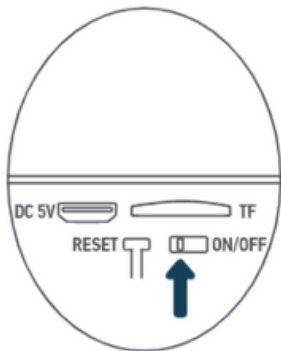



## C. Setup & Installation (Continued)

### Step 2: Add Device

Insert a Micro Card (not included) Before Setting Up the Device:

1. Connect your phone to a 2.4G Wi-Fi network (5G is not supported).
2. Place both the camera and phone close to the router, within a range of 1 to 3 feet (30 to 100 cm), and then connect to the Wi-Fi.

 
### Adding the Device

1. In the Devices page of the Linkstyle App, tap the “+” button and then tap “Add Device”.
2. On the next screen, scroll to the “Camera & Lock” tab and tap the “Smart Camera (Wi-Fi)” icon.
3. Follow the on-screen instruction, tap the dot next to the confirmation statement and tap “Next”.

## C. Setup & Installation (Continued)

4. Select the 2.4GHz Wi-Fi network and input the password, then tap “Next”.

5. Use the camera to scan the on-screen QR code. When you hear a voice prompt, tap “I Heard a Prompt”.

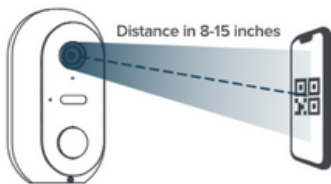


6. Wait for the the app to add the device.

7. Tap “Done” once the camera is added.

## C. Setup & Installation (Continued)

 Before scanning the QR code, ensure the indicator light is flashing slowly in RED. If it isn't, follow the steps below:

Reset the Camera: Hold the reset button for several seconds until you hear a chime.

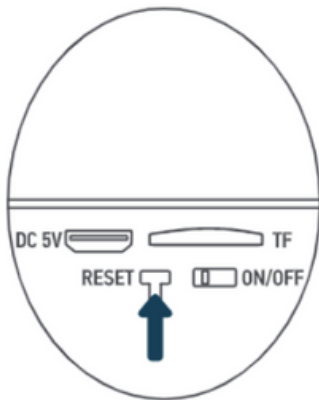


## C. Setup & Installation (Continued)

Inserting a Micro Card (not included)



Tip: The video playback function requires a micro SD card to be inserted.

Open the micro SD card slot cover located at the back.

 This camera supports up to 128GB micro SD cards in FAT32 format.

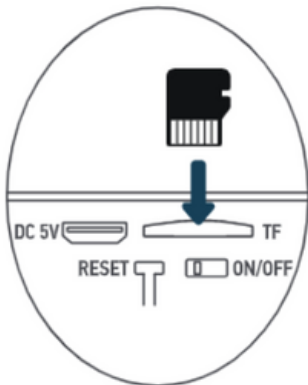


## D. Operating Instructions

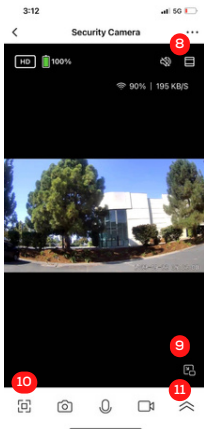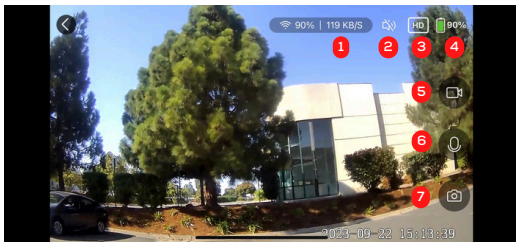  


1. Transfer speed
2. Enable or disable audio
3. Toggle image quality
4. Remaining battery
5. Record live video
6. Push to talk
7. Take photo
8. Zoom in
9. Floating window
10. Full screen
11. More quick settings

## D. Operating Instructions (Continued)

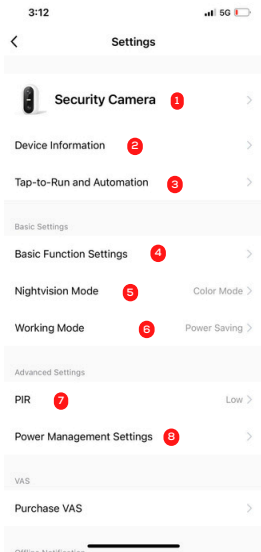 

1. Name management
2. Device information
3. Scene management
4. Set indicator status, screen flip, etc.
5. Night vision setting
6. Power saving or continuous modes
7. Motion detection settings
8. Power management settings

## D. Operating Instructions (Continued)

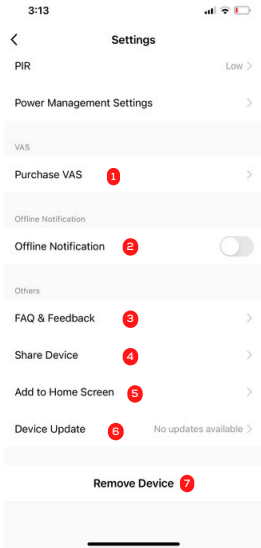 

1. Buy cloud storage
2. Turn offline notifications on/off
3. View FAQs
4. Share device access with other Linkstyle app users
5. Add quick access
6. Firmware update
7. Remove from account

## E. Troubleshooting

No.	Description	Solution and Operation
1	Unable to connect	Check your WiFi name and password. Ensure your WiFi is 2.4G HZ, not the 5G HZ WiFi. Ensure your camera and phone close to router.
2	Reset	hold the reset button for several seconds, Until you hear deng~deng~deng, it means it has been reset successfully.
3	Change to a new Network	Press reset key to factory default setting. Re-connection.
4	Can I add the camera to multiple accounts?	A camera only allows one account to be bound, and the bound account can share the device with other accounts.
5	No alarm push	Please enable iThink Smart app notification in mobile settings.
6	No alarm video record	Please insert SD card.
7	Device offline	Check if the network transferring fluency processes well.



## F. Frequently Asked Questions

**Q: What do I do if the network configuration fails during the setup?**

A: Ensure that your phone is connected to a 2.4GHz band router and verify that the Wi-Fi password you entered is correct.

**Q: The device still isn't added after scanning; what should I do?**

A: Restart the device. If that doesn't work, turn off the device and try adding it again.

**Q: Why can't I preview from the device normally?**

A: Check the strength of the network signal. If it's weak, move the camera closer to the router.

## F. Frequently Asked Questions (Continued)

**Q: I've reset the device, but why is the camera still showing in the device list?**

A: Resetting the device will only reset the camera's network settings. It doesn't remove the camera from the app. To delete the camera, you must do so from within the app.

**Q: How can I switch the camera's network to a different router?**

A: First, remove the device from the app and reset its settings. Then, reconfigure its network settings through the app.

**Q: Why isn't the device recognizing the SD card?**

A: Turn off the device, then re-insert the SD card. Ensure the SD card is functioning properly and is formatted in FAT32. If there's an unstable network, the app might also display an error indicating that the SD card isn't recognized.

## G. Product Specifications

Model: X1

Resolution: SD & HD

View Angle: 95°

Audio: Two-way talk, Siren Alarm

PIR Motion: Motion detection

Floodlight: 2\* White LEDs

Night Mode: Color Light & Infrared, Distance 8-10m

Storage: Supports up to 128GB micro SD card

Rechargeable Battery: 18650\*2pc, 5200mAh

Power supply: 5V/1A DC

Waterproof: IP54

Connection: Wi-Fi (IEEE802.11 b/g/n) 2.4GHz, 5G is not supported

Voice Control: Compatible with Amazon Alexa and Google Assistant

Compatibility: iOS 9.0+, Android 9.0+

## H. Warranty & Support

Thank you for choosing Linkstyle. We are dedicated to providing innovative and convenient products for an enhanced lifestyle. This Product Warranty Agreement ("Warranty") applies to items purchased directly from Linkstyle.

### **Warranty Duration:**

All products sold by Linkstyle come with a standard one (1) year warranty from the date of purchase, unless stated otherwise.

### **Warranty Coverage:**

During the warranty duration, Linkstyle assures that the product will be free from defects in materials and workmanship when used under regular conditions.

### **Exclusions:**

This Warranty does not cover the following:

- Damages due to misuse, neglect, or deviation from user instructions.
- Damages from natural disasters such as floods, fires, or accidents.
- Unauthorized repairs, modifications, or disassembling.
- Cosmetic damages like scratches, dents, or broken parts.

## H. Warranty & Support (Continued)

### **Filing a Warranty Claim:**

- Reach out to Linkstyle Customer Support providing your proof of purchase, product details, and a comprehensive description of the issue.
- Our team will evaluate the claim and, if required, provide return shipping instructions.
- If the product is confirmed defective, Linkstyle, at its discretion, will repair or replace the item.

### **Limitation of Liability:**

Linkstyle's liability is strictly limited to the repair or replacement of the product. Under no circumstances will Linkstyle be liable for any indirect, incidental, or consequential damages. The total liability shall not exceed the original purchase price of the product.

### **Warranty Transferability:**

This Warranty is solely for the original purchaser and cannot be transferred.

### **Governing Law:**

This Warranty is governed by the laws of the country/state of purchase.

### **Disclaimer:**

Apart from what's stated here, no other express or implied warranties apply, including implied warranties of merchantability or suitability for a specific purpose.

For any queries or concerns regarding our products or this Warranty, reach out to us at [support@linkstyle.life](mailto:support@linkstyle.life).

Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc.

Amazon, Alexa, and all related logos are trademarks of Amazon.com Inc. or its affiliates.

Google and Google Play are trademarks of Google LLC.

Other third-party brands and names are the property of their respective owners.

# Linkstyle.life

Unlocking the enchanted life!