

Linkstyle

 
Bryn Smart Pet Feeder
User Guide

If you need any support, don't hesitate to
reach out to us at:


contact@linkstyle.life

1-888-419-4888


What's Included

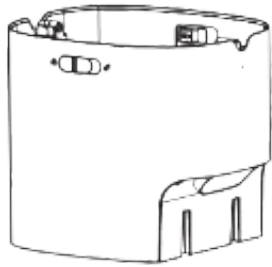


Main Unit

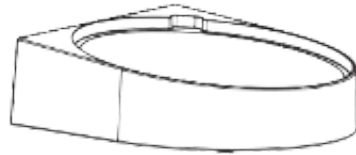 


Plastic Food Bowl

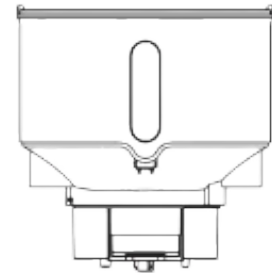 

Food Bucket

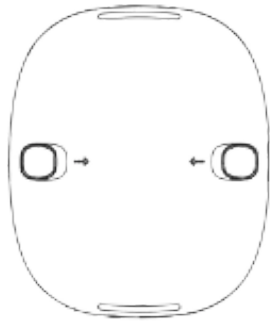 


Top Cover

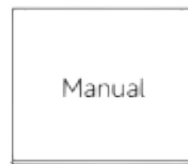 


User Guide



 Desiccant

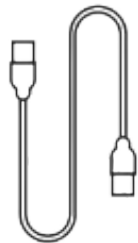


USB-C Cable

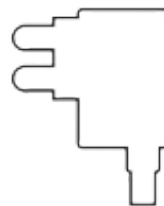 


Power Adapter




  Stainless Steel Inner Bowl
(Optional)

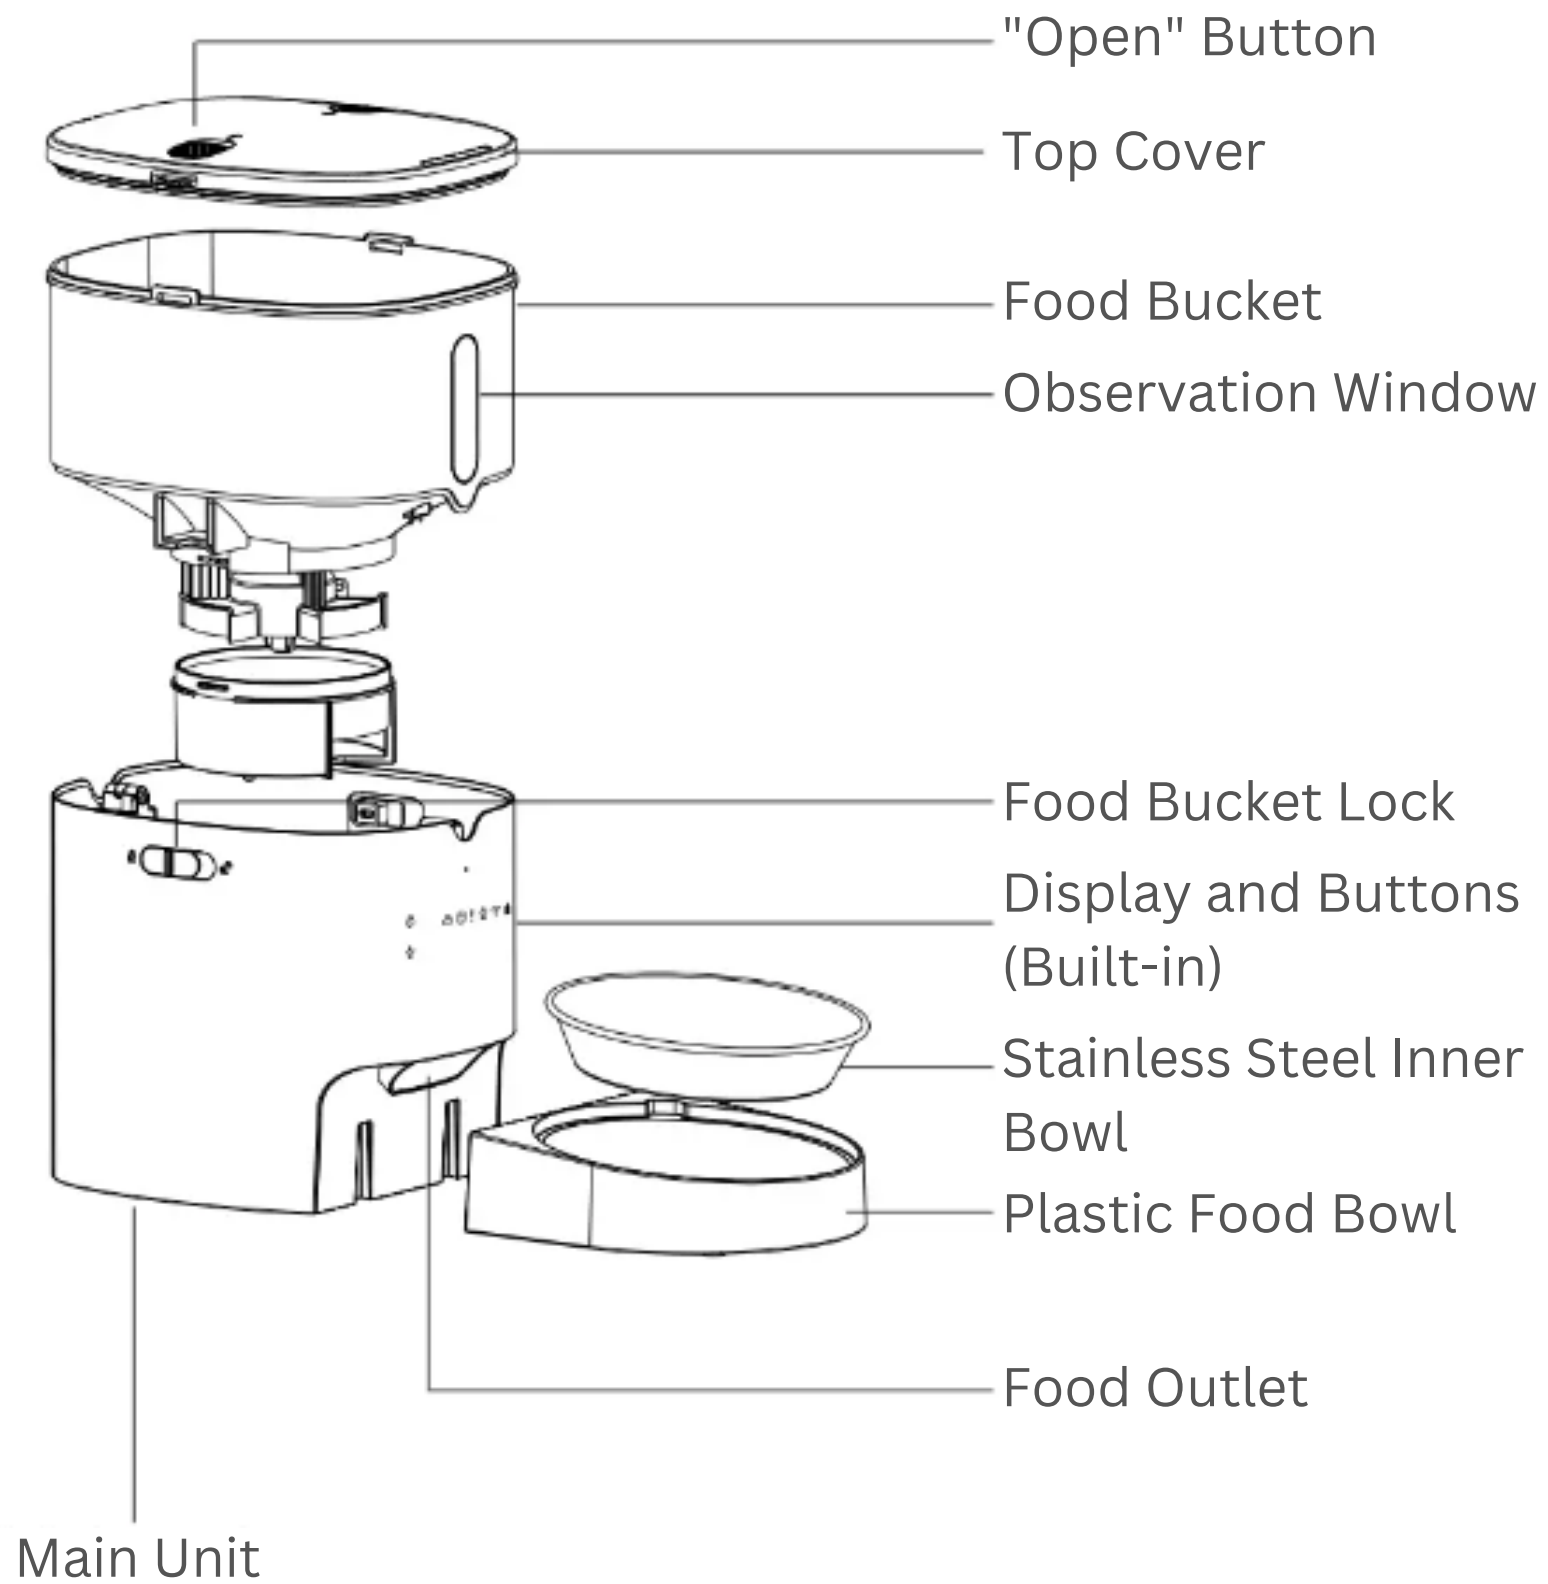


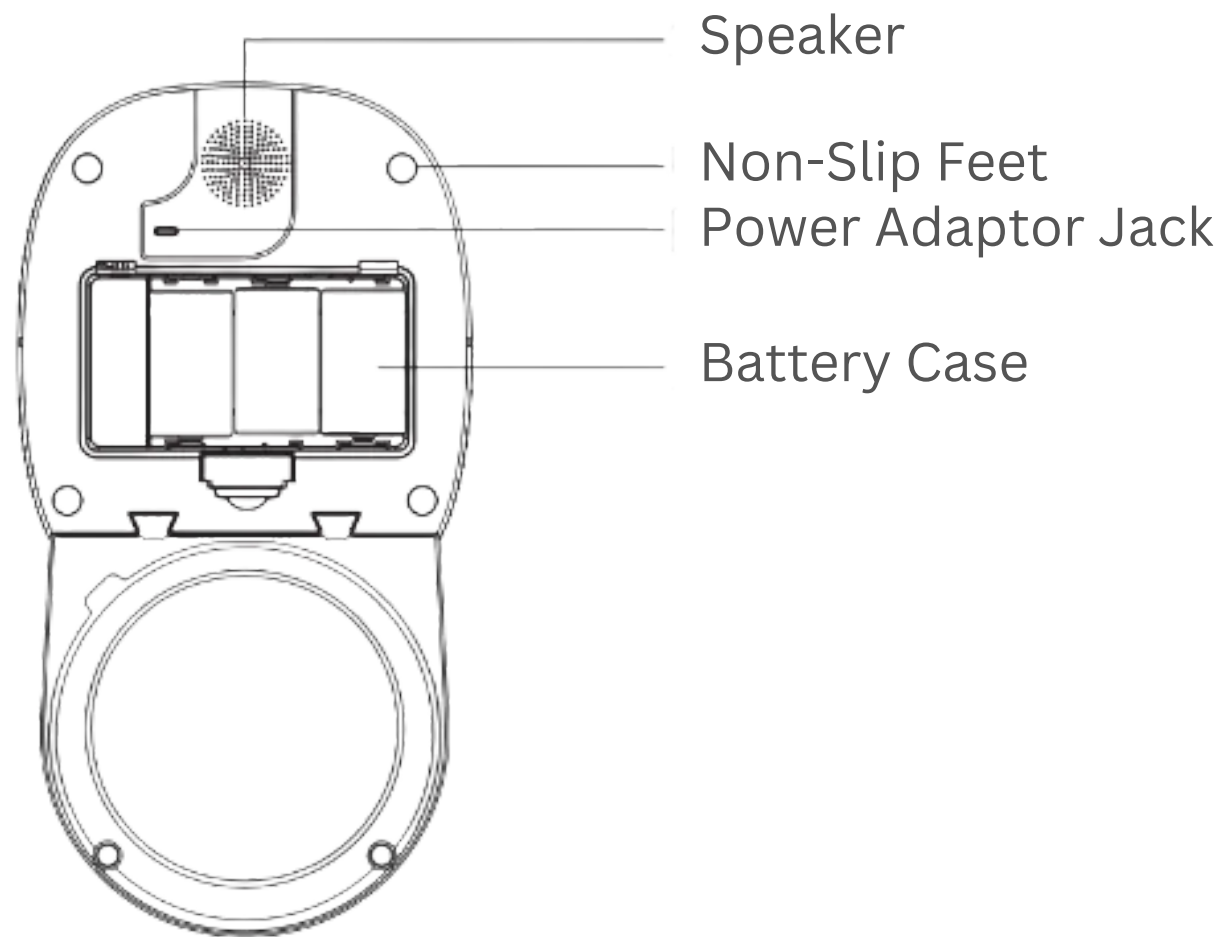

Silicone Rotor Blade

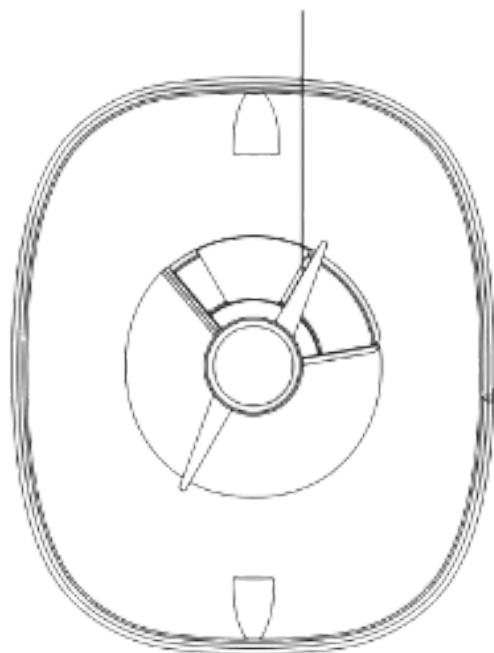 


Desiccant Box

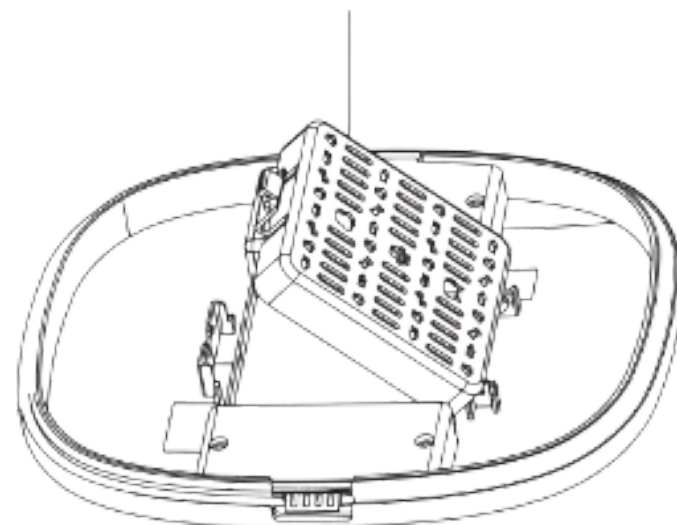 

Dual Power Supply

 This device can be powered using a power adapter, 3 x D cell batteries, or both.

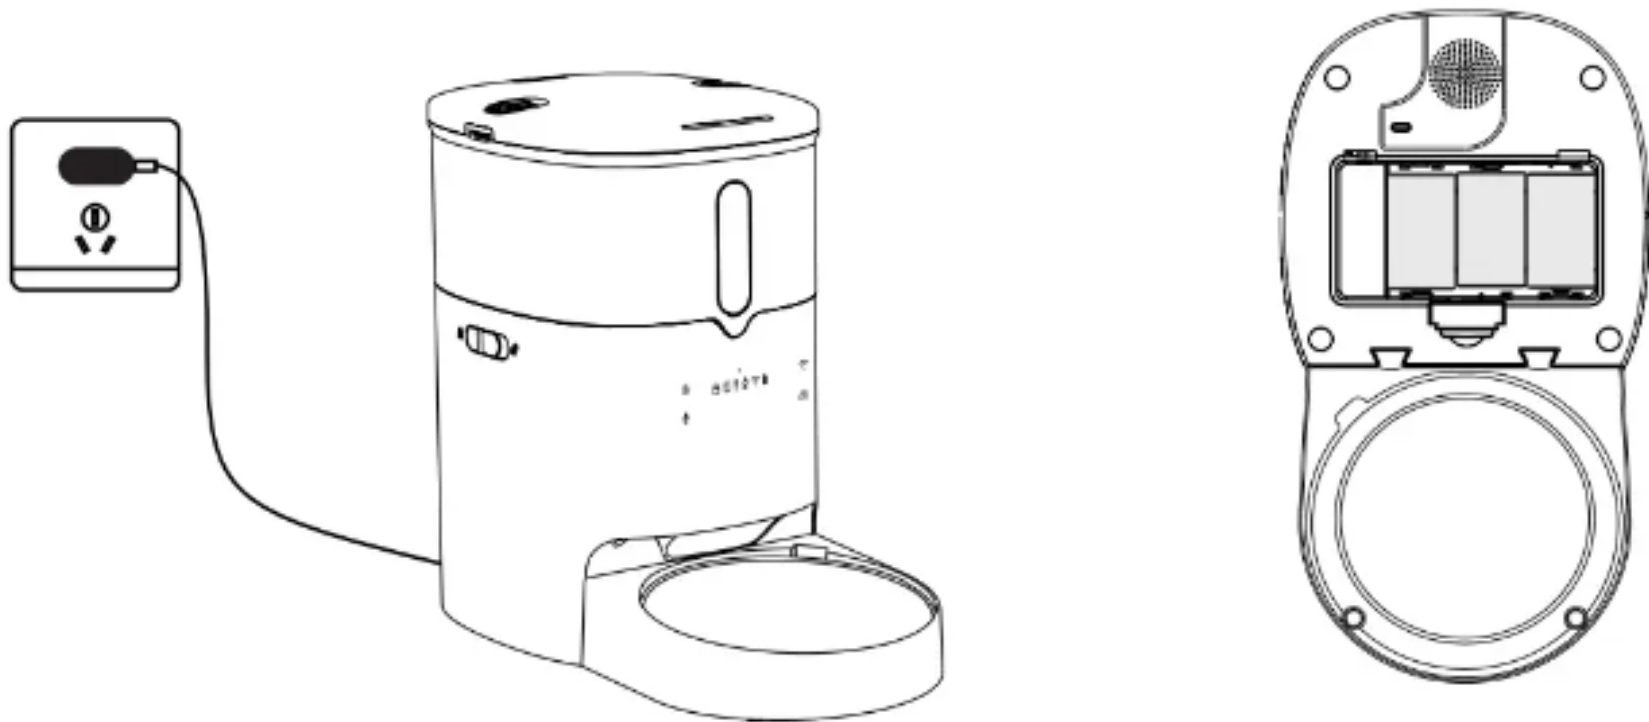

Installation

1. Place the main unit on a flat, horizontal surface and install the plastic food bowl.
2. Place the stainless steel inner bowl inside the plastic bowl.
3. Install the food bucket on top of the main unit and lock the bucket lock.
 - a. Scenario 1: The bucket already contains pet food. Please place the bucket on the main unit according to the correct orientation, press the lock button to unlock the device, then long press the manual feeding button for 3 seconds, the fault indicator icon will flash " ", the main unit will start the bucket installation auxiliary function automatically. In this process of function operation, please keep the bucket in a right orientation with your hand and wait for the accurate installation of the bucket
 - b. Scenario 2: If there is no food in the barrel, but still cannot be installed in place. You can repeat the operation in Scenario 1, or please ensure the bucket in the correct installation position, and at the same time, turn the silicone rotor blade to let the bucket installed in place
4. If the food bucket is empty, fill it with pet food.
5. Put the desiccant into the desiccant box, and install the to cover on the food bucket to complete the installation.

Button Operations

Lock Button

Hold for 3 seconds to unlock other buttons and screens



Recording Button

Holding the button for 3 seconds, when you hear the "beep" sound once and the recording icon lights up which means the recording will start (at most 6 seconds). When you release the button and hear the "beep" sound twice, the recording will be saved.



Wi-Fi Button

(Unlocking state) Long press the button for 5 seconds to reset the device and enter to AP mode network configuring, the white light will flash slowly; Long press again 5 seconds to switch the network configuration to EZ mode, the white light will flash quickly.



Manual Feeding Button

- (Unlocking state) Long press the button for 3 seconds to start the "food bucket installation function". The Fault indicator will flash. After finishing installation, it will stop flashing automatically.
- (Manual feeding state) Short press 1 time will distribute 1 portion food, 7-10g per portion; Long press will distribute food continually.



Operation Panel Icons

Food Shortage Icon

Food shortage: White light flashing
Food run out: Red light flashing

Lock Icon

Lights up when other buttons are locked

Fault Indicator Icon

- Food stuck: Red light flashing
- Food jam: Blue light flashing

Wi-Fi Icon

- Waiting for network configuration: The icon lashing in white
- Network configuration succeeded: The icon steady on in white
- Disconnected: The icon is off

Batter Icon

- No battery: Blank
- Low battery: Red light
- High level: White light

Recording Indicator

Light up when recording



Smart Functions

Install the Linkstyle app

Scan the QR code below to download and install the Linkstyle app. Register a new account on the app if you do not have one.



*Alternatively, you can also search for “Linkstyle” on the Apple App Store or Google Play Store to find the app.

***Important Note:

When registering an account in the Linkstyle app, be sure to set the region to United States of America.



Register

United States of America



Email Address

☐ I Agree [Privacy Policy](#) and [User Agreement](#)

Get Verification Code

Add Device to App

1. Connect your smartphone to your 2.4GHz home Wi-Fi network (a 5GHz network will not work).
2. Turn on Bluetooth on your smartphone to help with automatic discovery.
3. Press and hold the Wi-Fi Button on the device for 5 seconds until the Wi-Fi Icon starts flashing. If it is flashing slowly, press and hold the Wi-Fi Button again for 5 seconds until it flashes rapidly.
4. From the "Devices" page of the Linkstyle app, click the "Add" button to add a new device. The app will automatically search for new devices to add.
 - a. If the app is not searching for nearby devices, tap on the radar icon on top of the screen to start the automatic search.
5. When the pet feeder device has been detected, an icon will appear on the app. Tap on the device icon and follow the on-screen instructions to complete the setup.

Manual Feeding Operation

If you need to manually dispense food from the food bucket, press and hold the Lock Button for 3 seconds to unlock the device. Then:

- Short press the Manual Feeding Button to dispense one portion of food, approximately 7-10g per portion.
- Press and hold the Manual Feeding Button to dispense food continuously.

Cleaning Instructions

1. Do not wash the Main Unit with water. Wipe it with a soft cloth to clean it.
2. Please clean the Stainless Steel Inner Bowl every day for the sake of your pet's health and safety.
3. The Food Bucket and Plastic Food Bowl can be removed for cleaning:
 - a. Remove the Plastic Food Bowl from the Main Unit (Figure 1)
 - b. Unlock the bucket lock and draw up the Food Bucket (Figure 2)
 - c. Please empty and clean the Food Bucket and the Stainless Steel Inner Bowl (wipe dry) before using it for the first time.

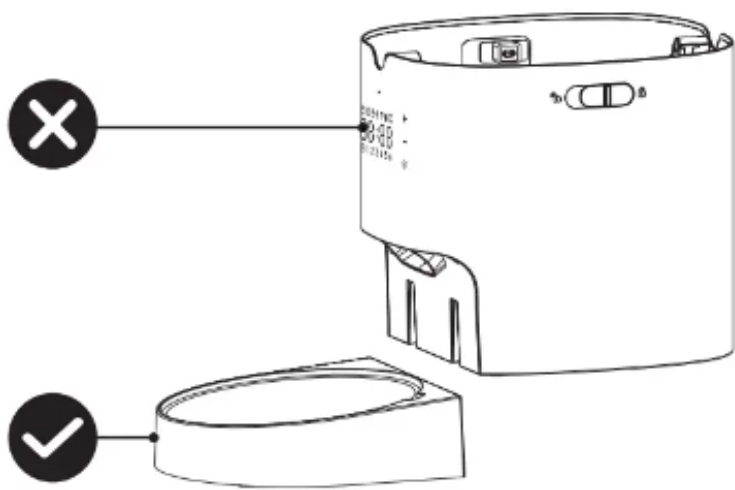 


Figure 1

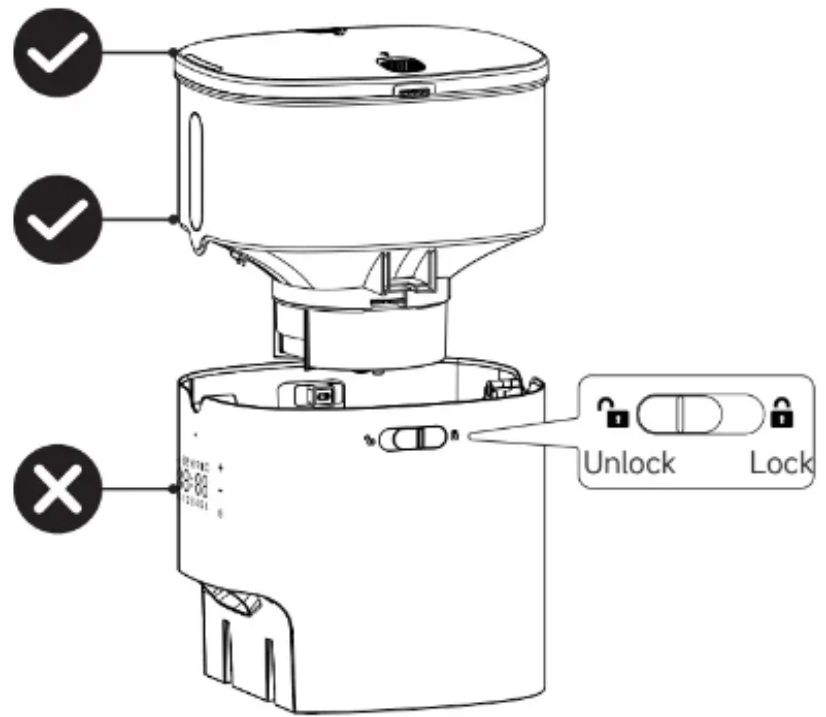 


Figure 2

✓ — Water-Washable

✗ — Non-Washable, clean with soft cloth only

Safety Notice

*Failure to comply with the following terms may result in the unavailability of the product or other unexpected losses. To reduce the risk of injury, monitor appliances closely when they are used near children.

- Do not immerse the base in water to avoid damage to the control panel and other electronic components.
- Do not use it outdoors or in damp environment such as toilet. Check and maintain regularly to ensure that the grain is delivered correctly.
- Do not use wet or damp food
- Do not place any foreign objects in the pet feeder
- This product is only suitable for pet food (diameter between 5-15mm), larger pet food may get stuck.
- Do not place the product on a high place. If the product falls down, it may cause damage or pet safety problems.
- Do not use the feeder for other purposes.
- Please use accessories recommended or sold by the manufacturer and do not modify the pet feeder without authorization.
- In addition to maintenance personnel, other people are not allowed to repair this product, so as to avoid causing various accidental injuries.
- Remove the battery and unplug the power cord when not in use and before cleaning.
- Please use in indoor environment, do not place in the sunlight can be used, it will affect the device work; Keep away from ignition.
- This device is in low voltage mode, but pets biting wires will still cause electricity leakage, please use the correct guidance.
- Keep it horizontal. Do not knock over the device. Otherwise, the device may not work properly.
- If the owner needs to go out, please check the battery in the battery box to ensure sufficient battery power (this product is only suitable for alkaline batteries).

Battery Powered Mode

- When the device is powered by batteries only, it does not support app remote control. To use the app with the device, plug it into an outlet.
- The feeder will dispense food regularly according to the feeding schedule, push the feeding message, and update the feeding status.
- The feeder will be on standby automatically after each feeding as planned, and all the indicators will be turned off.

Product Specifications

Model Number: SPF 2300-WB-TY

Capacity: 3L

Dimensions: 13.26 inches x 7.04 inches x 11.41 inches
(337mm x 179mm x 290mm)

Auto Feeding Schedule: 0-10 meals/day (0-50
portions/meal)

Power Source: 5V DC

Backup Battery: 3 x D cell battery

Power Consumption: < 0.5W

Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc.

Amazon, Alexa, and all related logos are trademarks of Amazon.com Inc. or its affiliates.

Google and Google Play are trademarks of Google LLC. Other third-party brands and names are the property of their respective owners.

Linkstyle.life

Unlocking the enchanted life!