



Linkstyle

 
Matrix Smart Lock  
Key Box Manual

If you need any support, don't hesitate to reach out to us at:

email: [support@linkstyle.life](mailto:support@linkstyle.life)

voicemail: 1-888-419-4888

# What's in the box



3 Pcs  
ST4x20



3 Pcs  
Expansion Plug






2Pcs  
Epoxy Card



1Pcs  
USB Cable

# Product Anatomy

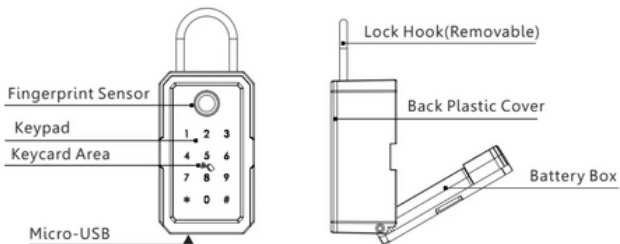 

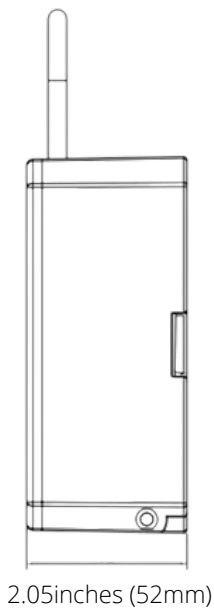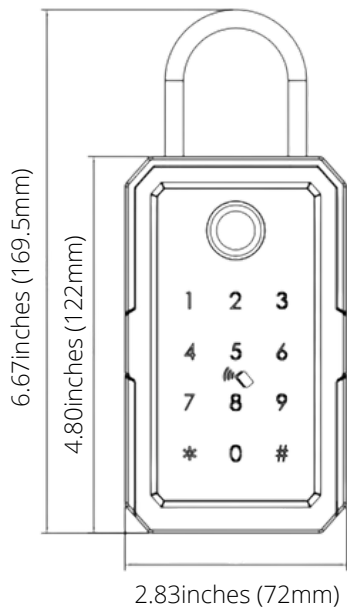  

# Overview

This device can connect with your smartphone using the Linkstyle app via Bluetooth directly or through a Bluetooth gateway. It has 4 different unlock methods and 2 different installation options depending on your use case.

## Unlock Methods:

- Fingerprint unlock
- Passcode keypad unlock
- Smart App unlock
- Keycard unlock

## Installation Options:

- Mount to wall with screws
- Lock in place with lock shackle

This device takes 4 AAA batteries for power. If the batteries run out, you can use a power bank with a micro-USB cable for emergency backup power while you unlock it and change the batteries.

# Smart Functions

Install the Linkstyle app

Scan the QR code below to download and install the Linkstyle app. Register a new account on the app if you do not have one.



\*Alternatively, you can also search for “Linkstyle” on the Apple App Store or Google Play Store to find the app.

### \*\*\*Important Note:

When registering an account in the Linkstyle app, be sure to set the region to United States of America.



## Register

United States of America

Email Address

I Agree [Privacy Policy](#) and [User Agreement](#)

 
Get Verification Code

# Prepare device for setup


1. Power up the key box with the included Micro-USB cable
2. Wake up the keypad by pressing any key, then enter the passcode 123456# to unlock and open it
3. Unscrew the battery box cover screw and remove the cover
4. Install 4 AAA batteries and screw the battery box cover back on
5. On first-time setup, the device should be in setup mode already. If not, perform a factory reset as shown on page 10.



# Battery Access

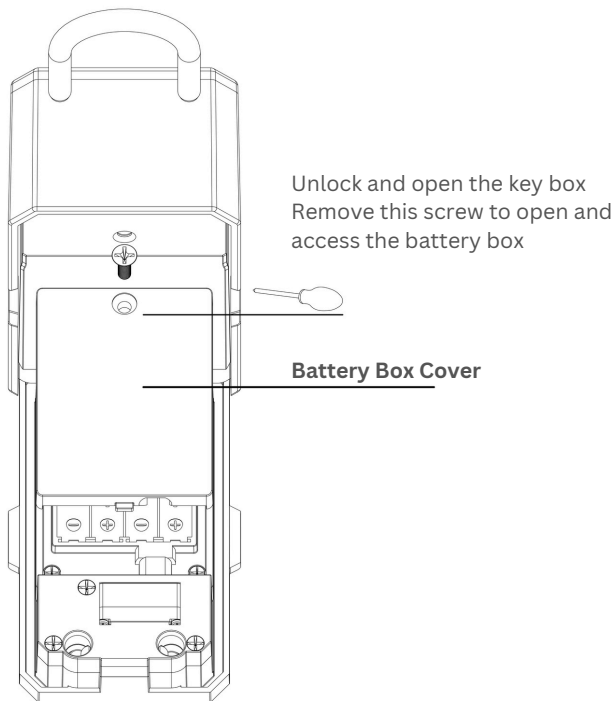

# Factory Reset

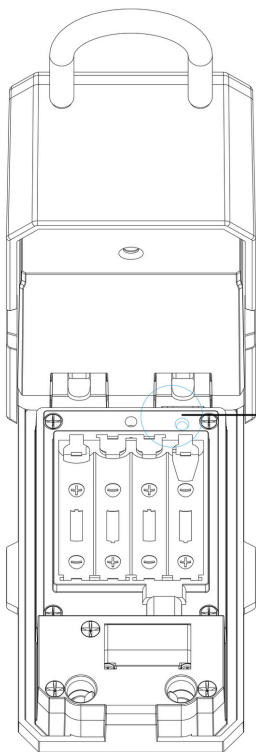 

Press and hold the reset button for 2 seconds until you hear "Please enter the initialization password."

Enter 000# on the keypad to complete the reset.

The unlock passcode will be reset to 123456#

**Reset Button**

Note: be sure to remove the device from your Linkstyle app account to complete reset.

# Add the device to app

The Matrix Smart Lock Key Box is a Bluetooth device that can connect to the Linkstyle app either to a 2.4GHz Wi-Fi network through a Bluetooth hub or directly to your phone via Bluetooth.

## **Wi-Fi**

Connecting to a 2.4GHz Wi-Fi network enables you to access and control it from anywhere that has internet access. See Page 12 for setup.

## **Bluetooth**

Connecting to your phone directly gives you access and control using Bluetooth in short range. See Page 14 for setup.

# Add the device to app - Wi-Fi

## Step 1: Set up gateway in Linkstyle app

Before setting up this device, be sure to have a Bluetooth hub added to the Linkstyle mobile app. You can use the [Nexohub Smart Multi-Mode Gateway](#) for this purpose. Please refer to the user manual for the gateway if it is not yet set up.

## Step 2: Add device to app through gateway

**Note:** Keep the gateway and the key box within close proximity during setup. You can relocate the device elsewhere within range for regular use after setup.

Put the device in setupmode. In the Linkstyle mobile app, navigate to the “Devices” tab, then tap the corresponding gateway to bring up the gateway page.

## Setup with the Nexohub

In the gateway page of the Linkstyle app, select the "Bluetooth devices list" tab, then tap the "Add devices" button on the bottom of the screen. From the pop-up menu, tap "Add new devices".

The app will now search for nearby devices. Once a key box icon shows up in the app, tap the "Done" button.

You can optionally rename the device in the app on the next page. Tap the "Done" button to complete setup.

## Add the device to app - Bluetooth

1. Put the device in setup mode.
2. Log into the Linkstyle app and go to the Devices page.
3. Tap the "+" button, then tap "Add Device"
4. The app will automatically scan for new devices to add.
5. Once the device is discovered, an icon will appear to represent the Tocabot device.
6. Tap on the Tocabot device icon and follow the on-screen instructions to complete setup.

# IMPORTANT

After setting up the Key Box on the app, before using it to hold any contents for the first time, repeat the following cycle 10 times:

1. Unlock using any method
2. Open the box fully
3. Close and lock the box

Cycling the lock this way will help lubricate the locking mechanism and accustom it to its function, which will make it operate more smoothly.

## Other Notes:

### Device Unlock

- Passcode - when you enter a passcode to unlock the device, the first touch only wakes up the keypad and does not register a key press. For example, pressing 1-2-3-4-5-# while the keypad is off will only register "2345#". Make sure to first wake up the keypad with any key press, then enter the full passcode.
- Key Card - to unlock the key box with a programmed key card, simply press the key card to the center of the keypad (between the 5 key and the 8 key).

### Jam Prevention

To ensure smooth operation of the key box, do not place keys or other objects directly into the box. Instead, hang the key(s) on the hanger nail to prevent jamming of the key box open mechanism.



## Set up unlock methods

 
In devices page of the Linkstyle app, tap the device to select it. In this interface, tap and hold the big unlock button to unlock the key .

To set up other unlock methods, tap the settings icon. In the settings menu, use menu items on top of the page and follow the on-screen instructions to manage unlock methods:

- Fingerprint Unlock
- Passcode Unlock
- Key Card Unlock
- Temporary Passcodes

# Installation


## Mount to Wall

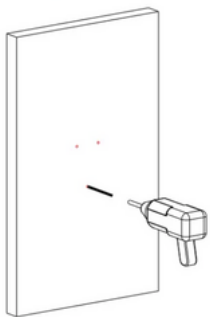

Drill 3 holes into the wall where the screws will line up




 Insert the plastic expansion plugs into the holes

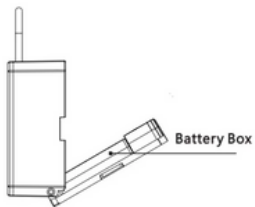


Attach the device to the wall with the provided screws. Test with 4 AAA batteries.

## Attach to Door Lock

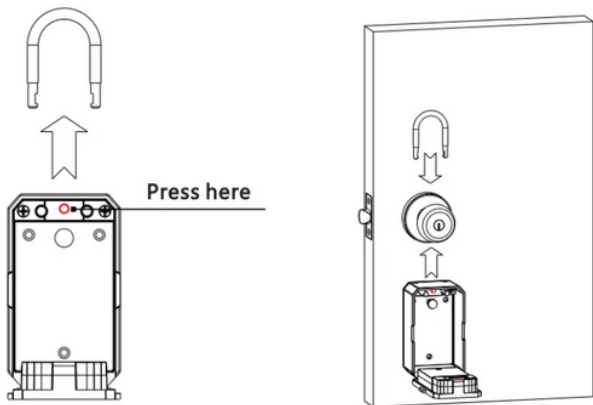 

 Press the shackle release button inside the device and take off the shackle. Then hang the shackle around the cylindrical lock and clip in the device.

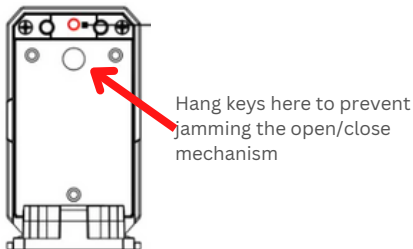

## Product Specifications

Model Number: K3

Material: Zinc alloy, ABS, Acrylic

Wireless Protocol: Bluetooth

Supported OS: Android 4.4 + and iOS 7.0+

Power Supply: DC 6V: 4pcs AAA alkaline batteries

Battery Life: 7000 times normal unlock (10 - 12 months)

Static Current: < 50 $\mu$ A

Dynamic Current: <200mA

Unlock Methods: Fingerprint, IC Card, Passcode, App

Unlock Time: 1 to 1.5 seconds

Working Temperature: -4 °F to 122°F (-20 °C to 50 °C)

Working Humidity: 10% ~ 95%

Factory Passcode: 123456#

Virtual Password Available

Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc.

Amazon, Alexa, and all related logos are trademarks of Amazon.com Inc. or its affiliates.

Google and Google Play are trademarks of Google LLC. Other third-party brands and names are the property of their respective owners.

# Linkstyle.life

Unlocking the enchanted life!