 




Linkstyle

Vinowake TrioVino:  
Aerator, Dispenser &  
Vacuum Preserver  
User Manual

For more product resources such as:  
digital manual, FAQs, video guides, etc.,  
scan the following QR Code or use the  
link below

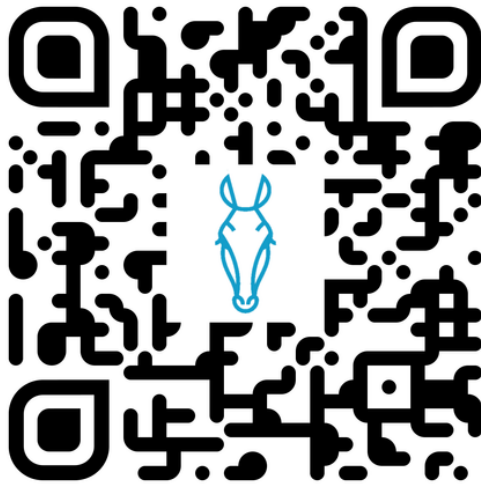

<https://linkstyle.life/vw55h>

If you need any support, don't hesitate to reach out to  
us at:

email: [support@linkstyle.life](mailto:support@linkstyle.life)  
voicemail: 1-888-419-4888

# Table of Contents

A. Notice Before Use.....	4
B. Product Overview.....	6
C. Setup & Installation.....	8
D. Operating Instructions.....	10
E. Error Handling.....	15
F. Maintenance & Care.....	16
G. Technical Specifications.....	18
H. Warranty & Support.....	19

## A. Notice Before Use

Make sure to charge the device with the provided magnetic charger before using it. This device charges from empty to full in approximately 3 hours.

We suggest that you run clean water through this device before first use.

This device is designed to create a vacuum seal on a standard wine bottle and will only draw water through the tube and spout in a sealed state.

 
To prevent spillage, always keep the bottle of wine on a stable, flat surface and hold the glass up to the spout when dispensing from the bottle.

Clean and dry immediately after use.  
Do NOT use detergents to clean the aerator channel.


## A. Notice Before Use (Continued)

Due to the indented shape of most wine bottles, a fully dispensed bottle of wine will still contain 1 to 2 ounces of wine at the bottom.

This device is designed to fit most wine bottles. There may be a few bottles with non-standard shapes that this device may not be compatible with.

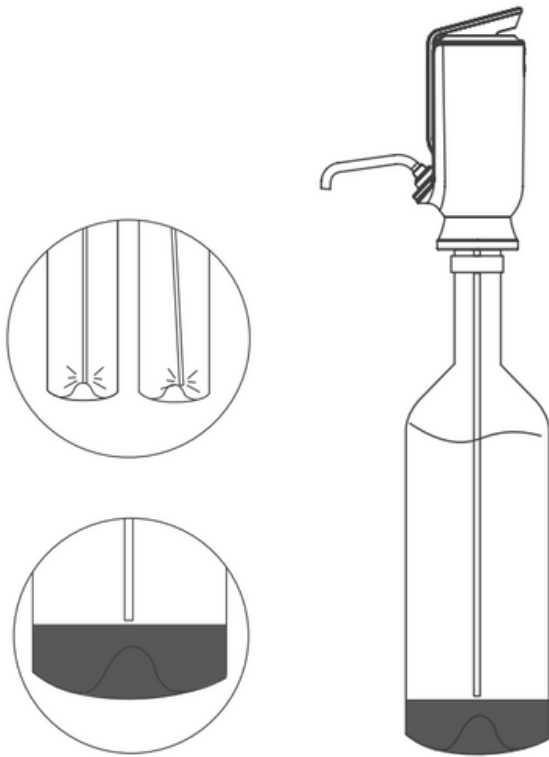

# B. Product Overview

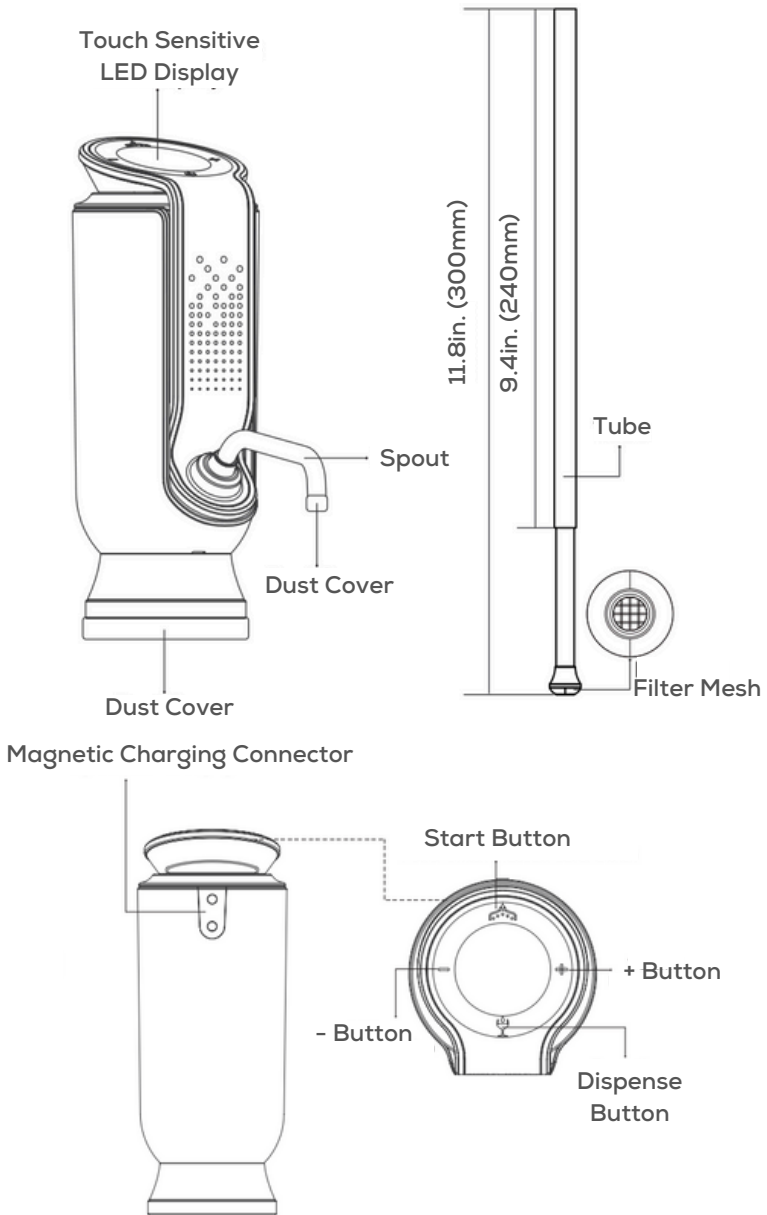 

## B. Product Overview

The Vinowake TrioVino is a multi-function device designed to provide a seamless wine-drinking experience. Its functions are:

- **Dispenser:** Dispense a preset volume of wine from the bottle with the press of a button
- **Aerator:** As the wine is drawn and dispensed from the bottle, it is infused with air, creating a decanting effect
- **Vacuum Preserver:** This device creates a negative pressure vacuum seal over the open wine bottle, which can be maintained up to 10 days on a full charge. This helps preserve the wine if it is intended to be drunk within a few days.

 
### Package Contents

- TrioVino Main Unit x 1
- Dispenser Tube x 1
- Magnetic Charging Cable x 1
- Manual x 1
- Quick Start Guide x 1

# C. Setup & Installation

## Charge the device

Plug the Magnetic Charging Cable into a USB charging outlet and use the magnetic connectors to charge the device. The battery indicator on the LED Display will show 100% once it is fully charged.

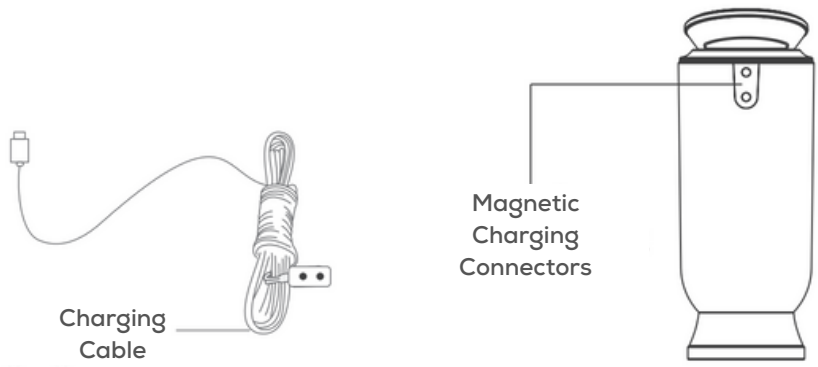




## C. Setup & Installation (Continued)


### Assemble the device

1. Install the Dispenser Tube by inserting the tube end into the tube cap on the main unit.
2. Open the bottle of wine and insert the device into the bottle tube first. Gently press the device down over the mouth of the bottle.

 1.

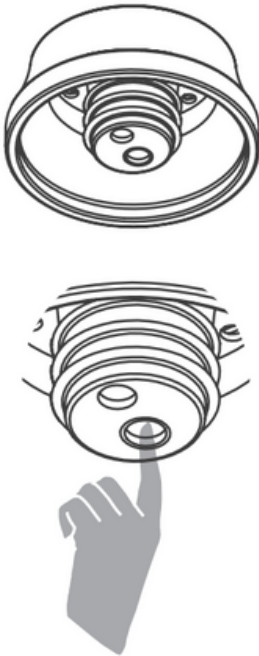

 
2.

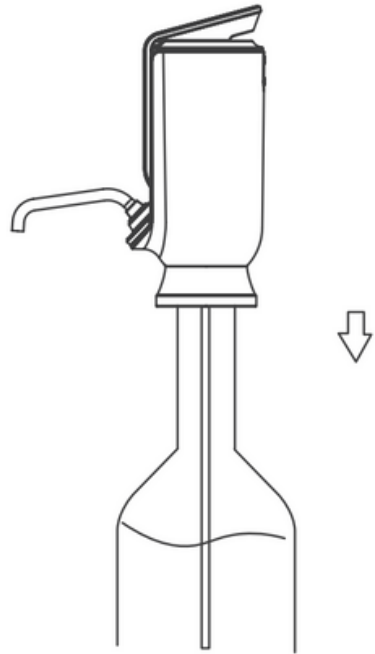

## D. Operating Instructions

### **Wake up the device**

 
Tap the Start Button to wake up the device.  
If the device is turned off, press and hold the Start Button until it turns on.

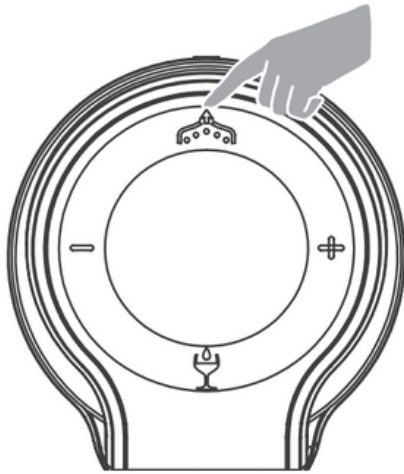

## D. Operating Instructions

### **Vacuum seal the bottle**

 Double tap the Start Button while the device is awake (Display is on) to draw out air and create a negative pressure vacuum seal of -50 kPa.

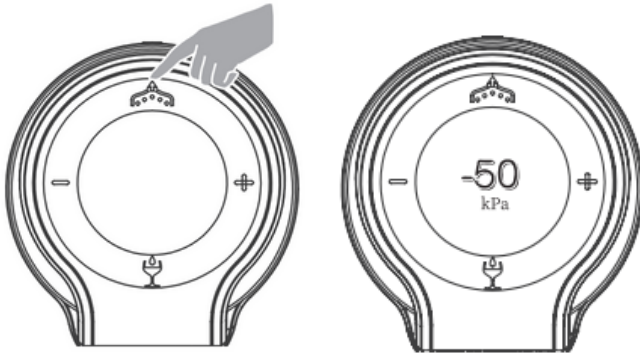

Note: The device will check the air pressure in the bottle every 10 minutes. If the pressure falls below -50 kPa, it will vacuum seal the bottle again. To stop the vacuum sealing process, press the Start Button.


To turn off the device entirely, wake up the device, then press and hold the Start Button until the screen turns off.

## D. Operating Instructions (Cont.)
 
### Set dispense volume

Press the + and - Buttons to set and view the volume. The volume will be shown on the LED Display in mL.

The dispense volume can be set between 50mL and 999mL.

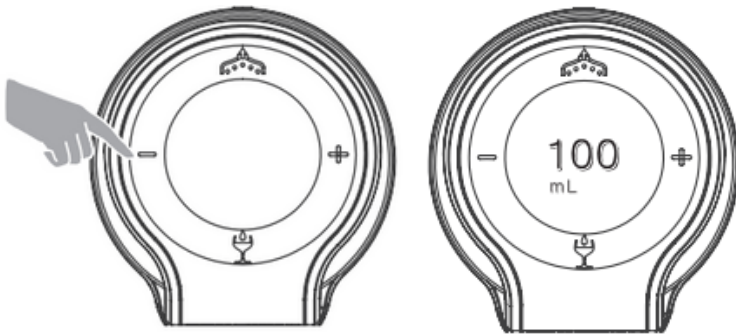


## D. Operating Instructions (Cont.)


### Dispense wine

Hold the wine glass up to the Spout.

 Double press the Dispense Button to dispense wine automatically. Do not remove glass from spout until the device has finished dispensing.

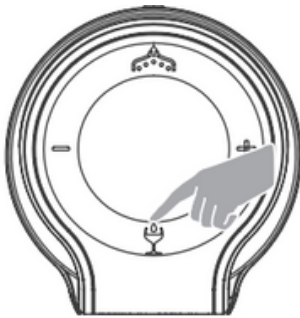

 
To terminate the dispensing process before it has stopped, press the Start Button

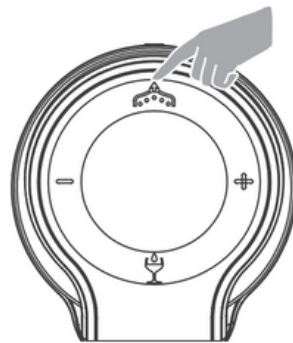


## D. Operating Instructions (Cont.)

### LED Display screens

 
The LED Display automatically cycles between 3 screens while it is awake, and goes to sleep in 30 seconds if no action is taken.

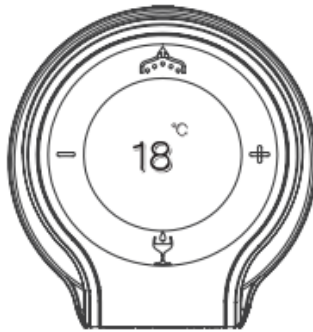

Temperature Indicator

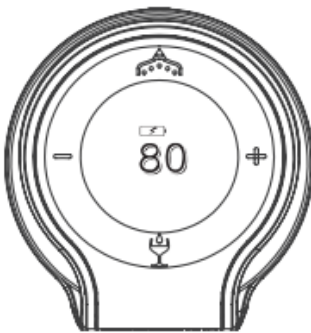 


Battery Indicator

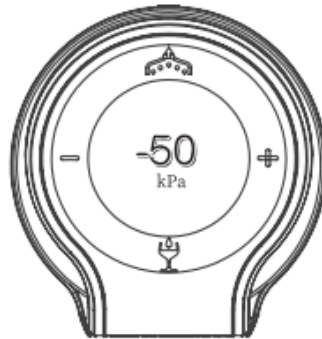 


Vacuum Saver  
Pressure Display


## E. Error Handling

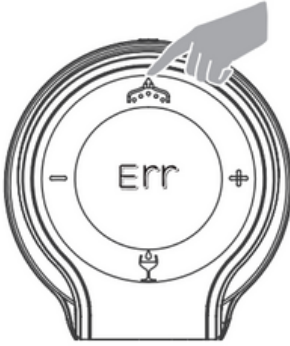 

 
Turn the device on and off (press and hold the Start Button) when you see the Err code.

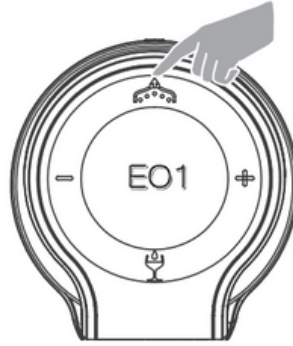

 Turn the device on and off, and make sure to fully charge the device before use if you see EO1.

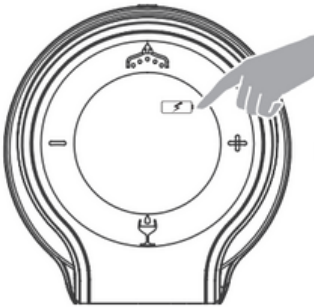

 Charge the device if you see the low battery indicator

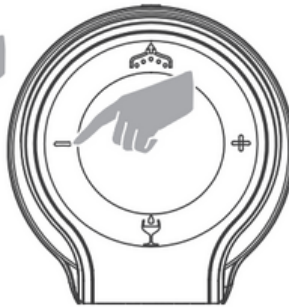

Press and hold the - Button for 5 seconds if device crashes


## F. Maintenance & Care
 
### Cleaning

Clean and dry this device immediately after use.

Do NOT use detergents to clean the inside of this device. For better cleaning effect, use a small amount of lemon juice or vinegar when rinsing the device.

1. Fill an empty wine bottle with clean water.
2. Use this device to dispense water from the bottle to flush the inside of the device.
3. Wipe the exterior of the device clean and dry it.

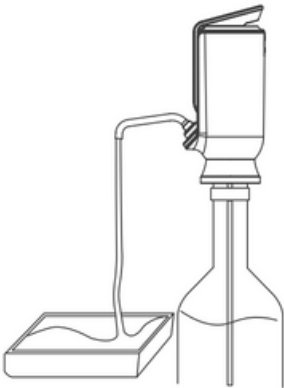



## F. Maintenance & Care (Cont.)

### **Storage**

Store this device in its original product packaging for maintenance when not in use.

# G. Technical Specifications

<b>Dimensions</b>	Height: 6.14 in. (156mm) Width: 2.36 in. (60mm) Depth: 5.19 in. (132mm) Net Weight: 9.98 oz (283g)
<b>Power Source</b>	Battery Type: Li-ion 3.7V Battery Capacity: 900 mAh Charge Time: Approx. 3 hrs
<b>Dispense Volume</b>	Approx. 8L on a full charge
<b>Vacuum Pressure</b>	-50 kPa
<b>Wine Preservation</b>	Up to 10 days
<b>Waterproof</b>	IPX4

# H. Warranty & Support

Thank you for choosing Linkstyle. We are dedicated to providing innovative and convenient products for an enhanced lifestyle. This Product Warranty Agreement ("Warranty") applies to items purchased directly from Linkstyle.

## **Warranty Duration:**

All products sold by Linkstyle come with a standard one (1) year warranty from the date of purchase, unless stated otherwise.

## **Warranty Coverage:**

During the warranty duration, Linkstyle assures that the product will be free from defects in materials and workmanship when used under regular conditions.

## **Exclusions:**

This Warranty does not cover the following:

- Damages due to misuse, neglect, or deviation from user instructions.
- Damages from natural disasters such as floods, fires, or accidents.
- Unauthorized repairs, modifications, or disassembling.
- Cosmetic damages like scratches, dents, or broken parts.

## H. Warranty & Support (Continued)

### **Filing a Warranty Claim:**

- Reach out to Linkstyle Customer Support providing your proof of purchase, product details, and a comprehensive description of the issue.
- Our team will evaluate the claim and, if required, provide return shipping instructions.
- If the product is confirmed defective, Linkstyle, at its discretion, will repair or replace the item.

### **Limitation of Liability:**

Linkstyle's liability is strictly limited to the repair or replacement of the product. Under no circumstances will Linkstyle be liable for any indirect, incidental, or consequential damages. The total liability shall not exceed the original purchase price of the product.

### **Warranty Transferability:**

This Warranty is solely for the original purchaser and cannot be transferred.

### **Governing Law:**

This Warranty is governed by the laws of the country/state of purchase.

### **Disclaimer:**

Apart from what's stated here, no other express or implied warranties apply, including implied warranties of merchantability or suitability for a specific purpose.

For any queries or concerns regarding our products or this Warranty, reach out to us at [support@linkstyle.life](mailto:support@linkstyle.life).

Apple and Apple logos are trademarks of Apple, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple, Inc.

Amazon, Alexa, and all related logos are trademarks of Amazon.com Inc. or its affiliates.

Google and Google Play are trademarks of Google LLC. Other third-party brands and names are the property of their respective owners.

# Linkstyle.life

Unlock the enchanted life!